

Датчики хлора, кислорода Охутах COS51D

Техническая информация

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Ноябрьск (3496)41-32-12
Оренбург (3532)37-68-04
Омск (3812)21-46-40
Орел (4862)44-53-42
Краснодар (861)203-40-90
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

эл.почта: ehr@nt-rt.ru || сайт: <https://endcounters.nt-rt.ru/>



Level



Pressure



Flow



Temperature



Analytics



Registration



Systems
Components



Services



Solutions

Technical Information

Oxymax COS51D

Digital sensor for measuring dissolved oxygen

Longterm-stable sensor for water and wastewater applications



Application

The continuous measurement of the dissolved oxygen concentration is very important in many areas of water management:

- Sewage treatment plants: Oxygen measurement and regulation in the activated sludge basin for a highly efficient biological cleaning process
- Water monitoring: Oxygen measurement in rivers, lakes or seas as an indicator of the water quality
- Water treatment: Oxygen measurement for status monitoring of drinking water for example (oxygen enrichment, corrosion protection etc.)
- Fish farming: Oxygen measurement and regulation for optimum living and growth conditions

Your benefits

- Sensor with digital data transmission:
 - Storage of calibration data in sensor
 - Insensitive to electromagnetic interferences thanks to digital communication to the transmitter
- Maximum measurement accuracy:
 - Longterm-stable measurement thanks to potentiostatic amperometric three-electrode system
 - Long maintenance intervals
 - Intelligent sensor self monitoring
- Membrane covered sensor, i.e.:
 - high O₂ selectivity
 - Minimum maintenance effort
 - Minimum calibration effort thanks to simple calibration in air

Further benefits offered by Memosens technology

- Maximum process safety through contactless inductive signal transmission
- Data safety through digital data transmission
- Easy handling thanks to storage of sensor-specific data in the sensor
- Predictive maintenance possible thanks to registration of sensor load data in the sensor

Function and system design

Measuring principle

The oxygen molecules diffused through the membrane are reduced to hydroxide ions (OH⁻) at the cathode. Silver is oxidized to silver ions (Ag⁺) at the anode (this forms a silver halogenide layer). A current flows due to the electron donation at the cathode and the electron acceptance at the anode. Under constant conditions, this flow is proportional to the oxygen content of the medium. This current is converted in the transmitter and indicated on the display as an oxygen concentration in mg/l, µg/l, ppm, ppb or Vol%, as a saturation index in % SAT or as an oxygen partial pressure in hPa.

Potentiostatic amperometric three-electrode system

The high-impedance, current-free reference electrode plays an important role. The formation of a silver bromide or silver chloride coating on the anode uses up the bromide or chloride ions dissolved in the electrolyte. In the case of conventional membrane-covered sensors working with the two-electrode system, this causes an increase in signal drift.

This is not the case with the three-electrode system: The change in bromide or chloride concentration is registered by the reference electrode and an internal control circuit holds the working electrode potential constant. The advantages of this principle are significantly increased accuracy of the signal and considerably extended calibration intervals.

Memosens technology

Maximum process safety

The inductive and non-contacting measured value transmission of Memosens guarantees maximum process safety and offers the following benefits:

- All problems caused by moisture are eliminated.
 - The plug-in connection is free from corrosion.
 - Measured value distortion from moisture is not possible.
 - Correct transfer of minimum measured values, e.g. with amperometric sensors.
 - The plug-in system can even be connected under water.
- The transmitter is galvanically decoupled from the medium. The result: No more need to ask about "symmetrically high-impedance" or "unsymmetrical" (for pH/ORP measurement) or an impedance converter.
- EMC safety is guaranteed by screening measures for the digital measured value transmission.
- Application in explosion-hazardous areas is unproblematic; the integrated electronics are intrinsically safe.

Data safety through digital data transfer

The Memosens technology digitalizes the measured values in the sensor and transfers them to the transmitter contactlessly and free from interference potential. The result:

- An automatic error message is generated if the sensor fails or the connection between sensor and transmitter is interrupted.
- The availability of the measuring point is dramatically increased by immediate error detection.

Easy handling

Sensors with Memosens technology have integrated electronics that allow for saving calibration data and further information such as total hours of operation and operating hours under extreme measuring conditions. When the sensor is mounted, the calibration data are automatically transferred to the transmitter and used to calculate the current measured value. Storing the calibration data in the sensor allows for calibration away from the measuring point. The result:

- Sensors can be calibrated under optimum external conditions in the measuring lab. Wind and weather do neither affect the calibration quality nor the operator.
- The measuring point availability is dramatically increased by the quick and easy replacement of precalibrated sensors.
- The transmitter does not need to be installed close to the measuring point but can be placed in the control room.
- Maintenance intervals can be defined based on all stored sensor load and calibration data and predictive maintenance is possible.
- The sensor history can be documented on external data carriers and evaluation programs at any time. Thus, the current application of the sensors can be made to depend on their previous history.


Measuring system

A complete measuring system comprises at least:

- the digital oxygen sensor Oxymax COS51D
- a transmitter, e.g. Liquiline CM42
- a special measuring cable, CYK10
- an assembly, e.g. immersion assembly CYA112 or retractable assembly COA451

Optional (see accessories):

- Holder system CYH112 for immersion operation
- Junction box RM (with cable extension)
- Automatic cleaning system Chemoclean with spray head

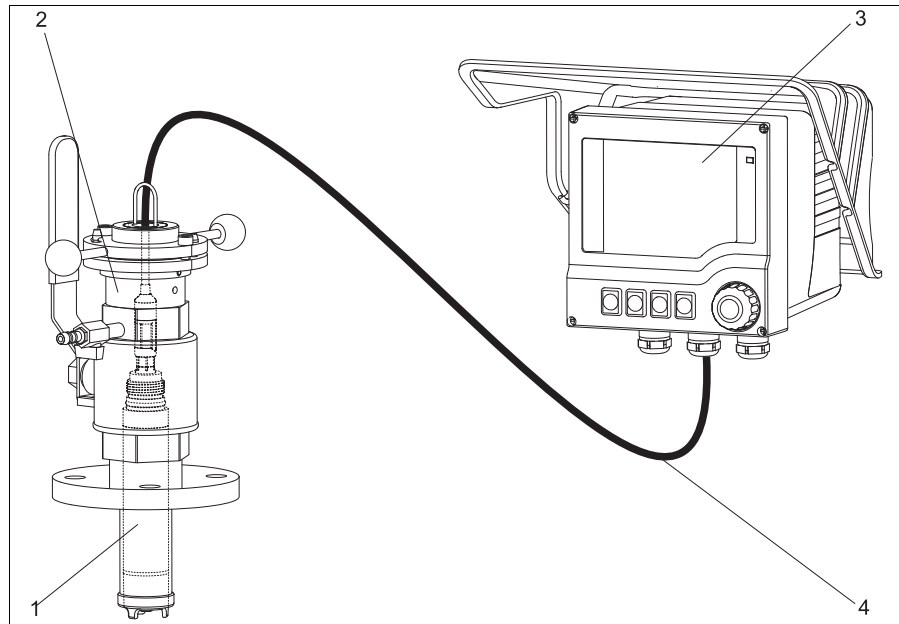

Measuring system (example)


- 1 Digital oxygen sensor Oxymax W COS51D
- 2 Retractable assembly COA451
- 3 Liquiline M CM42
- 4 Measuring cable CYK10

Input

Measured variable	Dissolved oxygen [mg/l, µg/l, ppm, ppb, % SAT or hPa]
Measuring range	0.01 to 100 mg/l 0.00 to 1000 % SAT 0 to 2000 hPa

Wiring

Electrical connection The sensor is electrically connected to the transmitter by means of the special measuring cable CYK10.

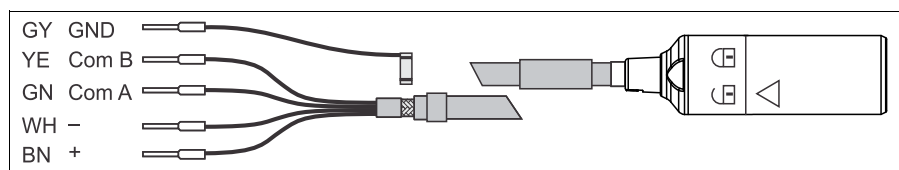

Special measuring cable CYK10

Performance characteristics

Response time	<ul style="list-style-type: none"> ■ COS51D-***0* (black membrane cap for normal response time): <ul style="list-style-type: none"> – t_{90}: 3 minutes – t_{98}: 8 minutes (each at 20 °C / 68 °F) ■ COS51D-***1* (white membrane cap for fast response time): <ul style="list-style-type: none"> – t_{90}: 0.5 minutes – t_{98}: 1.5 minutes (each at 20 °C / 68 °F)
----------------------	--

Reference operating conditions	Reference temperature: 25 °C (77 °F)
	Reference pressure: 1013 hPa (15 psi)

Signal current in air¹⁾	<ul style="list-style-type: none"> ■ COS51D-***0* (black membrane cap): approx. 300 nA ■ COS51D-***1* (white membrane cap): approx. 1100 nA
---	---

Measured value resolution	0.01 mg/l (0.01 ppm)
----------------------------------	----------------------

Maximum measured error	± 1 % of measured value ²⁾
-------------------------------	---

Repeatability	± 1 % of measured value
----------------------	-----------------------------

Long-term drift	Zero-point drift: < 0.1 % per week at 30 °C (86 °F)
	Measuring range drift: < 0.1 % per week at 30 °C (86 °F) ¹⁾
	1) under constant conditions each


Influence of medium pressure	Pressure compensation not necessary
-------------------------------------	-------------------------------------

Polarization time	< 60 minutes
--------------------------	--------------

Oxygen intrinsic consumption	<ul style="list-style-type: none"> ■ COS51D-***0*: Approx. 90 ng/h in air at 25 °C (77 °F) ■ COS51D-***1*: Approx. 270 ng/h in air at 25 °C (77 °F)
-------------------------------------	---

Installation

Angle of installation

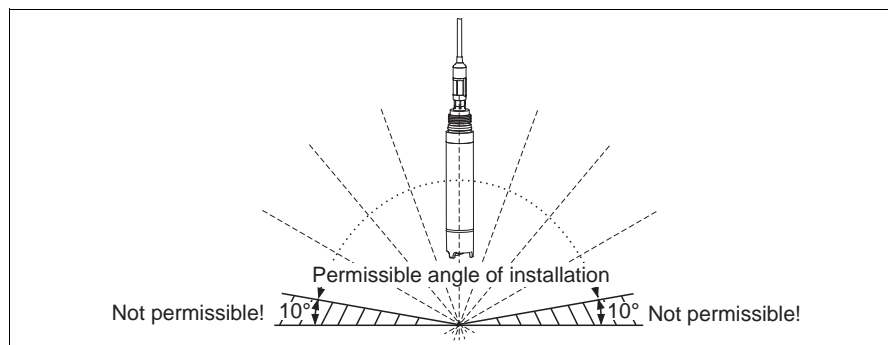

Permissible angle of installation

a0006741-en

1) For the reference operating conditions indicated
 2) In accordance with IEC 61298-2 at nominal operating conditions

Environment


Ambient temperature range	-5 to 50 °C (20 to 120 °F)
Storage temperature	filled with electrolyte: -5 to 50 °C (20 to 120 °F) without electrolyte: -20 to 60 °C (0 to 140 °F)
Ingress protection	IP 68 (test conditions: 10 m (33 ft) water column at 25 °C (77 °F) in 30 days)

Process

Process temperature	-5 to 50 °C (20 to 120 °F)
Process pressure	max. 10 bar (145 psi) Underpressure operation is not permissible.

Mechanical construction

Design, dimensions

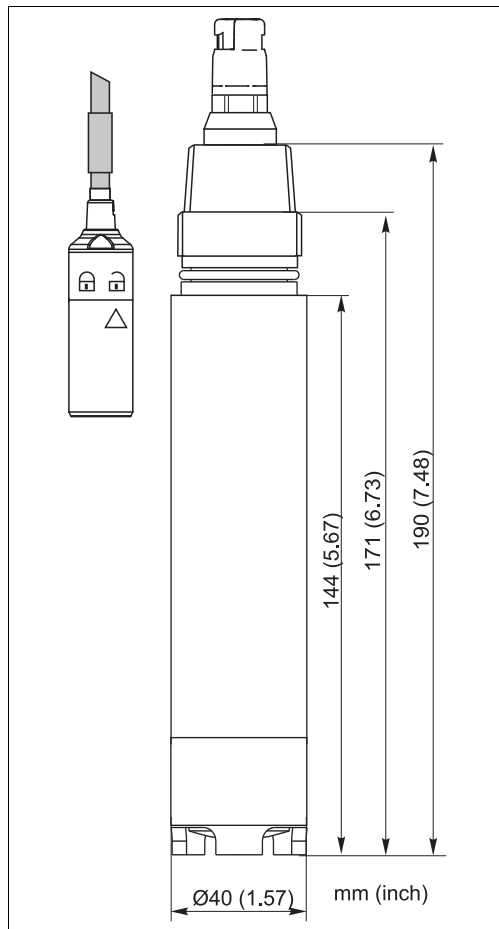

Dimensions

Weight	0.3 kg (0.7 lbs)
---------------	------------------

Material	Sensor shaft:	POM
	Membrane cap:	POM
	Cathode:	Gold
	Anode/Reference electrode:	Silver / silver bromide

Process connection	G1 and NPT 3/4"
---------------------------	-----------------

Membrane thickness	■ COS51D-***0*: approx. 50 µm
	■ COS51D-***1*: approx. 25 µm

Temperature compensation	internal
---------------------------------	----------

Electrolyte	Alkaline electrolyte
--------------------	----------------------

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижегород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

эл.почта: ehr@nt-rt.ru || сайт: <https://endcounters.nt-rt.ru/>